



- 1 / D / LCD.05
- 2 / D / LCD.06
- 3 / D / LCD.07
- 4 / D / SPI2.CLK
- 5 / D / SPI2.OUT.H0S1
- 6 / D / ConsoleRx (IN) / COM4.Rx
- 7 RESET
- 8 / D / SPI1.OUT.H0S1 / INT
- 9 GND
- 10 Vcc (3.3V)
- 11 / D / COM2Tx / INT
- 12 / D / INT
- 13 / D / COM2Rx
- 14 / D / INT
- 15 / D / COM1Tx / INT
- 16 / D / COM3Tx / INT
- 17 / D / COM3Rx / INT
- 18 / D / COM5Rx / INT
- 19 ANALOG Vcc (3.3V)
- 20 ANALOG GND
- 21 / D / INT
- 22 / D / LCD.CS / INT
- 23 / D / COUNT / INT
- 24 GND / LCD.MR / INT
- 25 GND / INT
- 26 Vcc (3.3V)
- 27 / D / LCD.RS / INT
- 28 / D / LCD.RESET / INT
- 29 / D / COM1E / INT
- 30 / D / INT
- 31 / D / INT
- 32 / D / INT
- 33 (In, en1) / 5 / INT
- 34 USB +5V
- 35 Vcc (3.3V)
- 36 USB D-
- 37 USB D+
- 38 Vcc (3.3V)
- 39 Vcc (3.3V)
- 40 GND
- 41 GND
- 42 / D / PMM1B
- 43 / D / 12C1.SDA
- 44 / D / 12C1.SCL
- 45 / D / 12C1.SCL
- 46 / D / 12C1.SCL
- 47 / D / 12C1.SCL
- 48 / D / 12C1.SCL
- 49 / D / 12C1.SCL
- 50 / D / 12C1.SCL
- 51 / D / 12C1.SCL
- 52 / D / 12C1.SCL
- 53 / D / 12C1.SCL
- 54 / D / 12C1.SCL
- 55 / D / 12C1.SCL
- 56 / D / 12C1.SCL
- 57 Vcc (3.3V)
- 58 / D / 5 / COM4Tx / ConsoleTx (OUT)
- 59 / D / 5 / COM4Rx
- 60 / D / 5 / COM4Rx
- 61 / D / 5 / LCD.D0
- 62 / D / LCD.D2
- 63 / D / LCD.D3 / PMM1C
- 64 / D / LCD.D4